



Operational Manual

A Comfort Heat floor heating system has been installed in your floor. The electrical heating cables will warm the floor giving you unparalleled feeling of comfort. The heating system will be controlled by an electronic thermostat that has a floor sensor for optimum temperature control. The thermostat will control the floor temperature at the selected comfort level.

Prior to turning on:

The sub-floor and screed have to be fully cured before turning the heating on. For sand & cement screeds you must wait at least 3 weeks before turning on. With an Ultra-thin installation you need to wait 2-3 days for the tile glue to cure. When turning on the floor for the first time, increase the floor temperature gradually over 2-3 days.

Thermostat Control:

The MTC thermostat is a manual thermostat. You simply switch it on, and set the desired temperature. When the red light is on this means the floor is heating. If there is no light then the floor is either off or at selected temperature. When the light flashes there is an error.

The MCC2 thermostat has a built in programmable time-clock to allow for the under-floor heating system to automatically be turned ON and OFF at selected times. During the OFF periods the thermostat will control the floor temperature at a set back temperature.

The floor is heating when the))) appears in the screen. If you see 'E1' and 'E2' there is an error.

Suggested Temperature Settings:

Under-Tile 24 -26 degC max. temp 30 deg C	Under-Carpet 25 degC max. temp 28 deg C	Under-Timber max. temp 27 deg C	In-Slab max. temp 27 deg C
---	---	------------------------------------	-------------------------------

Thermostat Operations:

Refer to the thermostat instructions for full details on setting and operation of the installed thermostat.

Warranty:

Under-Tile Warranty: 10yrs	Under-Carpet Warranty: 5yrs	Under-Timber Warranty: 5yrs	In-Slab Warranty: 10yrs
-------------------------------	--------------------------------	--------------------------------	----------------------------

Thermostats & Sensors - 2 Years